


# INSTALLATION INSTRUCTIONS

WOOD WALL TRIM & SLEEVE

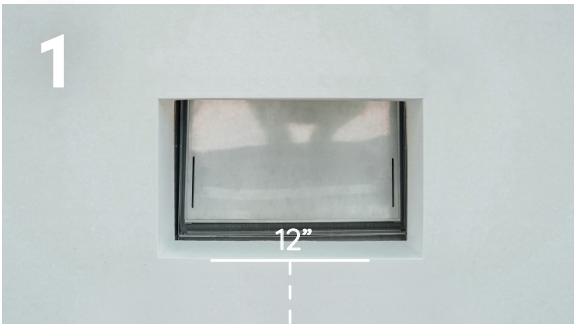


### Prepare Opening

Ensure smooth installation by clearing the interior opening of any debris.



### Apply Sealant on Flange

Use HurriBond or an equivalent adhesive on all edges of the back side of the trim flange.

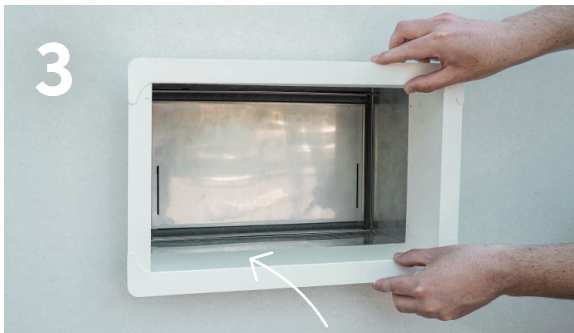

### Install into Interior Opening

Compress the trim flange to the opening for 1 minute.



### Check Flange Frame Placement

Make sure flange frame is level, flush with the wall, and firmly adhered.


| MODEL      | OPENING SIZE       |
|------------|--------------------|
| 1540-573   | 14½"W x 8½"H x 4"D |
| 1540-573-9 | 14½"W x 8½"H x 9"D |

This product comes in a white powder coat finish only.

1540-11011A 07/23/2024

# INSTALLATION INSTRUCTIONS

TRIM & SLEEVE + FIRE DAMPER

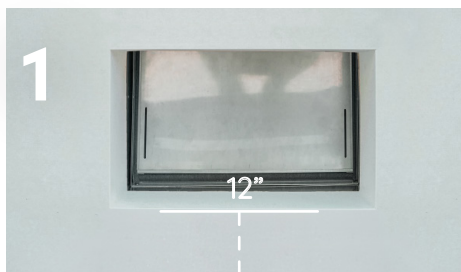

## Prepare Opening

Ensure smooth installation by clearing the interior opening of any debris.



## Apply Fire-Rated Sealant

Use a fire-rated adhesive on all edges of the back side of the flange.




## Install into Interior Opening

Compress the frame to the wall for 1 minute.



## Check Flange Frame Placement

Make sure flange frame is level, flush with the wall, and firmly adhered.

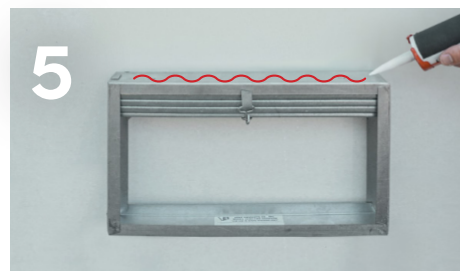

## Apply Fire Barrier on Fire Damper

Apply fire barrier along all 4 sides of the fire damper.




## Slide Fire Damper Into Trim Flange

Gently insert fire damper into trim flange, making sure they are flush and level.



## Apply Sealant on Fire Damper

Additional sealant may be required to ensure the entire crevice is filled.

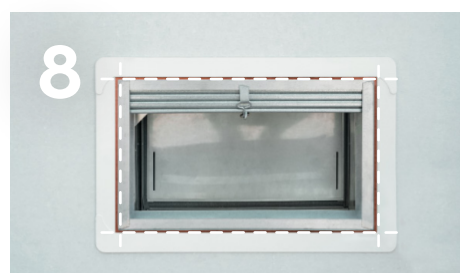

## Check Fire Damper Placement

Make sure fire damper and trim flange are level, flush with the wall, and firmly adhered.



**Minimum 8" wall depth required for flood vent, trim flange, and fire damper.**

Please consult with a local fire official for specific installation requirements. These are suggested installation steps.

1540-11012A 07/23/2024