




PIP-Buck Installation Instructions

- 1) Locate the Top Inside Sticker to ensure proper installation.



- 2) Place the Buck in-between the forms. Fasten by nailing through the forms and into the interior wood bracing in all four corners on both sides, or clamp the window into place with form clamps.

- 3) Pour the concrete. After the forms have been stripped the SMART VENT Buck installation is complete. Remove the protective film and wood bracing and lock your sash.

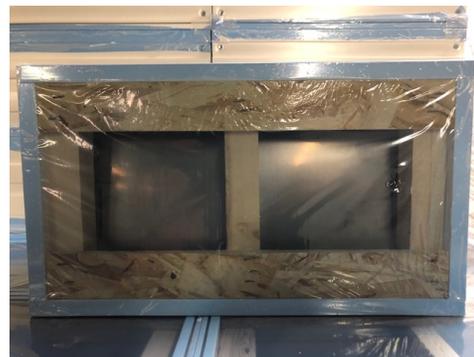

In the case of 10", 12" or greater walls, the SMART VENT PIP Buck utilizes existing base frames with a 2" extension. Simply apply the 2" extension to the inside face of the window by snapping the extension into the integral snap-in groove. This can be done with a rubber mallet or hand pressure. The extension is available for both standard and custom size units and can be used with all base frames.

SMART VENT PRODUCTS, INC.

Sales Office 430 Andbro Drive, Unit 1 · Pitman, NJ 08071
info@smartvent.com

Office: (877) 441-8368 · Fax: (856) 269-4465
www.smartvent.com

